




Mounting Template for 3381 Wire Basket

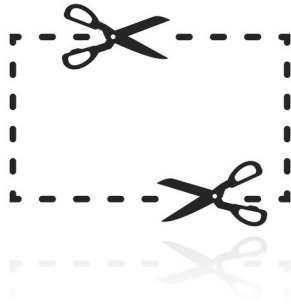


Print document using the “**No Scaling**” setting on your printer.
Cut out right hand and left hand templates.


Corners must be cut at 90°

Place each template into the corner of the wall at desired height.
Mark the pilot holes.

Right hand template

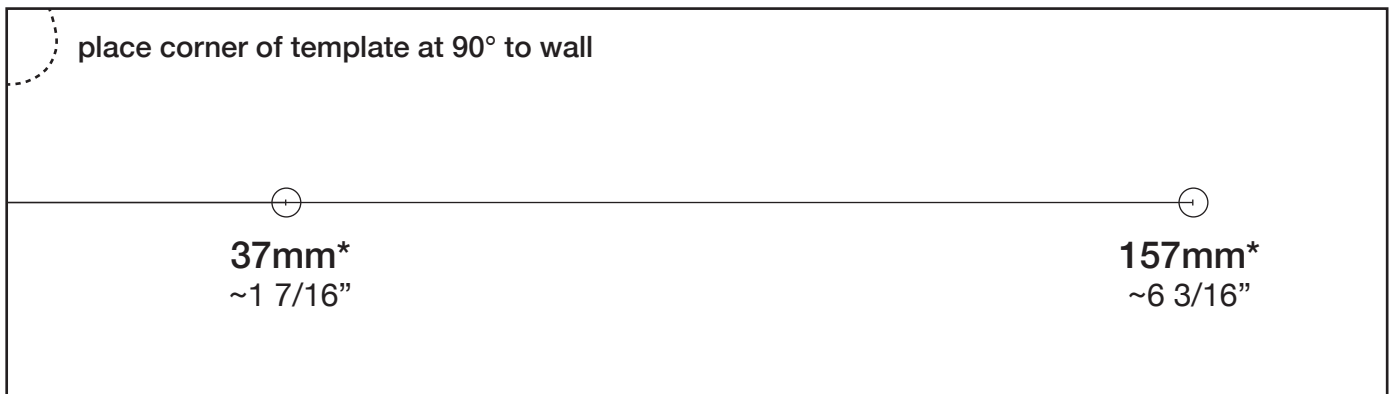

Left hand template

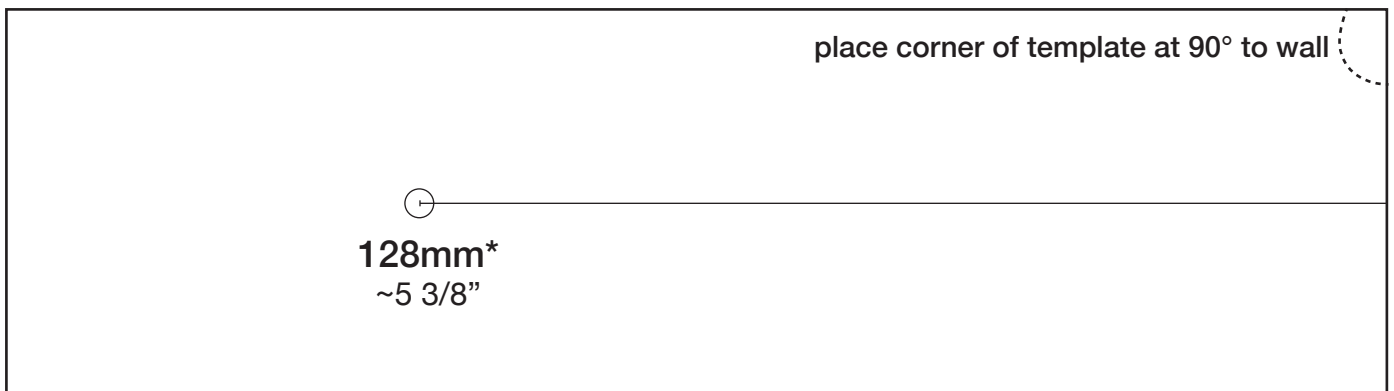

*** Use metric dimensions for greatest accuracy.**